



**I.L. MOTORSPORT**

# Installation Manual

## NC Windblocker transparent

NC0-301107

05/2017

Open the hood and secure it in the normal way.

Remove the small OEM windblocker by giving it a short pull upwards. (pic 1)




pic 1

Cut out the supplied templates R and L on page 3 of this document.  
Now position the templates on the rollbar lining (pic 2 & 3)



pic 2

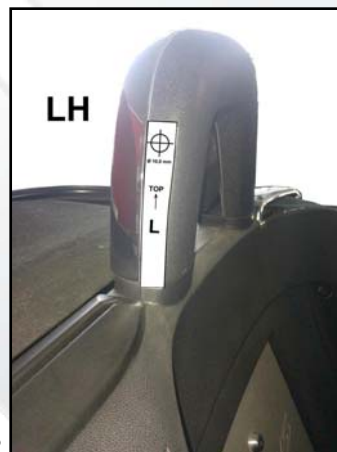

pic 3

You can now drill one hole per side in the rollbar lining, please use a Ø10mm drill.

**Hint:** pre drill the holes with a Ø4-5mm drill before using the Ø10mm drill for optimal result.

When done please remove the templates from the rollbar lining, and install the supplied rubber dowels in the holes you just drilled. (pic 4 / 5)



pic 4

**Gummidübel  
rubber dowels**



pic 5



# Installation Manual

## NC Windblocker transparent

NC0-301107

05/2017

Install the supplied brackets on the transparent windblocker as follows:

Put an 'O' ring on the short screws and slide it through the holes in the windblocker, now put a second 'O' ring onto the protruding screw on the other side. Now you can hold the bracket against the windblocker and attach it by turning the screws. (pic 6 / 7)



pic 6



pic 7



pic 8

Install the rubber protector in the space between the rollbar hoops and on top of the OEM windblocker openings. (pic 8)

Place the windblocker in the rubber protector and attach the windblocker to the rubber dowels with the supplied M5 x 20 screws.





**I.L. MOTORSPORT**

# Installation Manual

NC Windblocker transparent

NC0-301107

05/2017

Schablone / Template

